



Installation Guide AWM-W6

Wall Channel

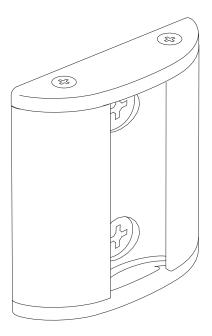


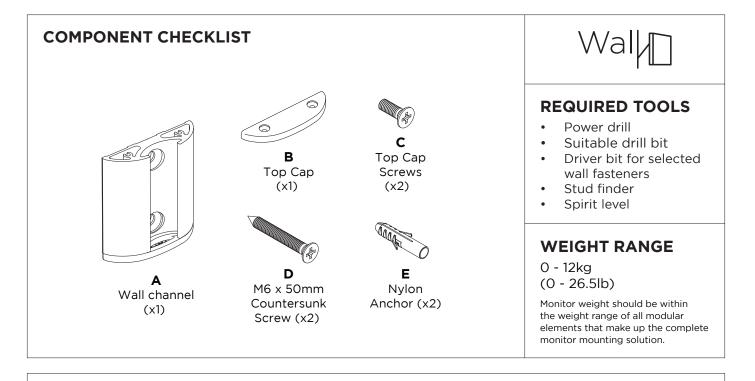


IMPORTANT INFORMATION

- Please ensure this product is installed as per these installation instructions.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is not suitable for outdoor use.
- ! Do no use this product for mobile application.
- Wall Bracket only achieves maximum weight rating when appropriately fastened to a wall of adequate structural capacity.
 Professional installer to ensure adequate structural capacity of wall (including appropriate safety factor) to support total weight of all equipment being mounted.
- Drilling into electrical wires can cause death use appropriate equipment and caution when drilling holes in walls to avoid electrical cables, water pipes and gas pipes. Do not drill into structures unless you have established it's safe to do so.
 This product is only compatible with AWM Series products, including: AWM-A13, AWM-A46, AWM-A71 and AWM-ADC.
- This product is only compatible with AWM series products, including: AWM-A46, AWM-A46, AWM-A776
 This product is **not** compatible with the AWM Heavy Duty Heads, including: AWM-LTH and AWM-LR.


1. Mount the Wall Bracket to the Wall

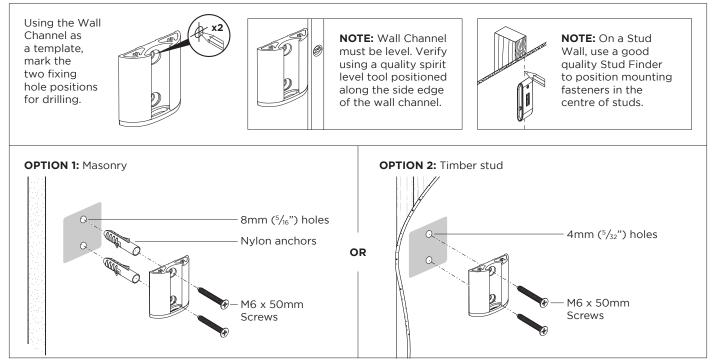

2. Fit channel clamp to Wall Channel

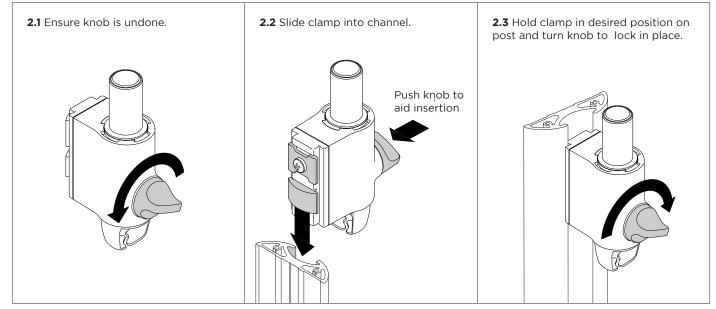

3. Fit Top Cap to Wall Channel

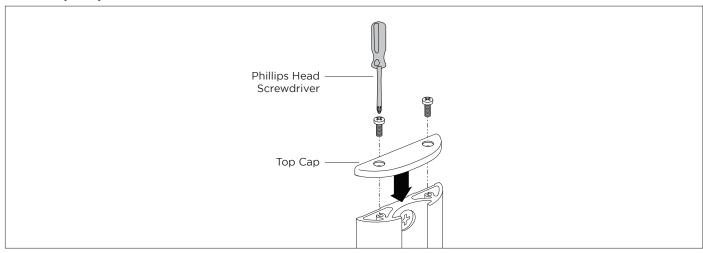



No portion of this document or any artwork contained herein should be reproduced in any way without the express written consent of Atdec Pty Ltd. Due to continuing product development, the manufacturer reserves the right to alter specifications without notice. ©20221028