




Post with Guide marks

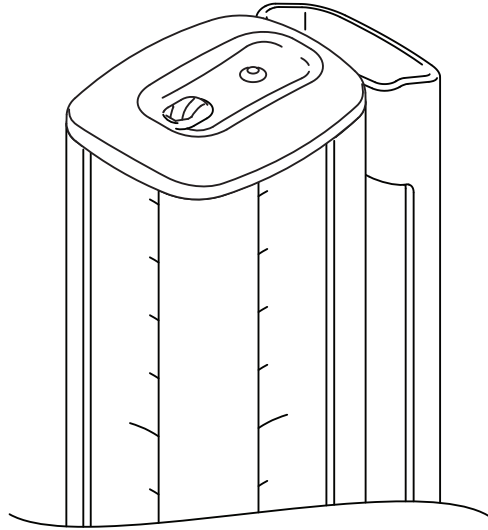


COMPONENT CHECKLIST

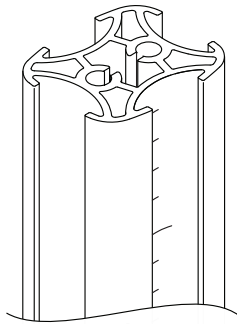


A
Post
(x1)




C
M8x60mm
Screw
(x2)



D
Cable Clip
(not supplied
with all posts)

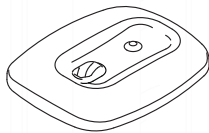

B
Post Cap
(x1)



E
Cable Cover
(not supplied
with all posts)

Desk 

REQUIRED TOOLS

- All tools provided

IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with Atdec AWM Series products.
- ! The manufacturer accepts no responsibility for incorrect installation.

1. Attach Post to fixing (fixing sold separately)

1.1 Follow the installation guide provided with your fixing to attach it to the post and fit it to the worksurface.

AWM Fixing options

AWM-FB Bolt Through Kit AWM-FF F Clamp AWM-FH Heavy Duty F Clamp AWM-FC C Clamp AC-GC Grommet Clamp Atdec Custom Rail Plate

2. Mount Arms onto Post

2.1 Follow the installation guide provided with your arm(s) to mount it to the post.

Use guide marks on post channels as a reference for setting the height of each arm.

NOTE Additional adjustments may be required once monitors are installed.

NOTE: Do not mount monitor arm on rear channel post when using the following desk clamps:

AWM-FF AWM-FH AWM-FC

3. Position Cable Cover and fit Post Cap

3.1 To reposition the cable cover, unclip cable cover from post and insert it into any of the available channels

Optional cable cover positions

3.2 Fit post cap onto the top of the post

Allen Key (Supplied w/fixing)

Post Cap

Note: An allen key may be stored in the Post Cap.

Post

4. Cable clips and cover

4.1 Load cables into cable clip.

4.2 Insert one side of the cable clip into a channel on the post, then push in the other side.

4.3 Load cables into cable cover.

Load cables into cable cover

4.4 Clip the cable cover onto any of the four post channels.

Cables can exit from the side of the cable cover